 



 



 

 

 

 








 




 

 



















 











Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 i	 Info / Angle
 0	 0
 R	 Back / Return
 (≡i)	 >> / Tune+
 (◆)	 I<< / Preset-
 (≡o)	 << / Tune-

Originale	Sostituto
 (≡?)	 Play / Slow
 Freeze	 Pause / Step / Freeze
 Aspect	 Shift + Picture / Format
 Audio	 Audio / Lang I/II
 Sleep	 Sleep / Timer
 Picture	 Picture / Format
 Source	 AV / Input / RDS
 (≡x)	 Rec / Rec Mode
 Hold	 Stop / Hold
 P+	 CH+ / Page+
 Up	 Up
 Left	 Left
 Vol-	 Vol-
 Menu	 Menu / Home
 Right	 Right
 Vol+	 Vol+
 P-	 CH- / Page-





Originale	Sostituto
 Down	 Down
 (≡)(-)	 Text / Goto
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 PIP Source	 Shift + 3
 PIP Main	 Shift + 2
 PIP Swap	 Shift + 5
 PIP Position	 Shift + 4
 PIP Size	 Shift + 6
 PIP	 Shift + 1

Originale	Sostituto

