



 

 

 
 

 
 





 

 

 

 

 










Originale	Sostituto
	 Power
	 Picture / Format
	 Back / Return
	 Menu / Home
	 Up
	 Left
	 OK
	 Right
	 Down
	 Exit / Cancel / Clear
	 Stop / Hold
	 Smart / List
	 I<< / Preset-
	 Play / Slow
	 Pause / Step / Freeze
	 >>I / Preset+
	 CH+ / Page+

Originale	Sostituto
	 Vol-
	 Vol+
	 CH- / Page-
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Mute / Dimmer
	 Rec / Rec Mode
	 AV / Input / RDS
	 Setup / OPT /
	 Subtitle / EQ
	 Display / Media
	 Fav / Marker / PC
	 Guide / EPG / -/-
	 Shift + Smart / List
	 Info / Angle








 
 




 




 
 








 

Originale		Sostituto	
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Disc Menu		D.Menu / Top
	0		0
	Text / Media		Text / Goto
	Sound		Sound / Title
			Zoom / Size
	Repeat	+	Shift + Green / APP /

Originale		Sostituto	





Originale	Sostituto
 Power	 Power
 (•J)	 TV/Radio /
 Back	 Back / Return
 Menu	 Menu / Home
 Up	 Up
 Left	 Left
 Ok	 OK
 Right	 Right
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Stop	 Stop / Hold
 Smart Tv	 Smart / List
 Skip Prev.	 I<< / Preset-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Skip Next	 >>I / Preset+
 Ch+	 CH+ / Page+

Originale	Sostituto
 Vol-	 Vol-
 Vol+	 Vol+
 Ch-	 CH- / Page-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue/00/Lang.	 Blue / Prime Video / Random
 Mute	 Mute / Dimmer
 Rec	 Rec / Rec Mode
 Source	 AV / Input / RDS
 Option	 Setup / OPT /
 Subt.	 Subtitle / EQ
 Iptv	 Display / Media
 Eco/Search	 Fav / Marker / PC
 Guide/ Popup	 Guide / EPG / -/-
 Ch.List	 Shift + Smart / List
 Info	 Info / Angle





Originale		Sostituto	
1	1	TV 1	1
2 ARC	2	DVD 2	2
3 DEF	3	CD - STB 3	3
4 DISC	4	VIDEO 4	4
5 INCL	5	TAPE 5	5
6 MIND	6	TUNER 6	6
7 POPS	7	AUX - HDD 7	7
8 TV	8	USB 8	8
9 NXYZ	9	BLUETOOTH 9	9
DISC MENU	Disc Menu	TOP MENU D.MENU	D.Menu / Top
0	0	HDMI - BAT 0	0
TEXT MEDIA CENTER	Text/ Media	GOTO TEXT	Text / Goto
SOUND	Sound	TITLE SOUND	Sound / Title
◀ ▶ ↑ ↓ ⇄		SIZE ZOOM	Zoom / Size
REPEAT	Repeat	SHIFT + APP REPEAT	Shift + Green / APP /

Originale		Sostituto	

