

 




 



 









 




 





 


 
 
 
 
 
 




Originale	Sostituto
	 Power
	 Smart
	 AV
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Pre Ch
	 Info
	 Shift + Pre Ch
	 Shift + Format

Originale	Sostituto
	 Shift + Dual
	 Vol +
	 Vol -
	 Mute
	 Ch +
	 Ch -
	 Menu
	 Guide
	 Up
	 Down
	 Right
	 Left
	 Ok
	 Dual
	 Format
	 Eject
	 Exit





Originale	Sostituto	Originale	Sostituto
Radio	Radio	SEARCH TV/R	TV/R
Next	Next	»»I	>>I
Lang	Lang	DISC NAV LIST	List
Subtiti	Subtitle	AD SUBT	Subt
Back	Back	RETURN BACK	Back
Forward	Forward	»»	>>
Pause Play	Play	PLAY MODE ▶	Play
Pause Play	Pause	⏸	Pause
Stop	Stop	■	Stop
Red	Red	A	Red
Green	Green	B	Green
Yellow	Yellow	C	Yellow
Blue	Blue	D	Blue
Text	Text	REPEAT TEXT	Text
PIP Size	Size/PIP	ECO 3D	3D
Swap Reveal	Reveal/Swap	SETTINGS OPT	Options
CH Δ Cancel	Cancel/CH Up	SHIFT + + CH	Shift + Ch +

Originale	Sostituto	Originale	Sostituto
CH V Mix	Mix/CH Down	SHIFT + CH -	Shift + Ch -
Source Sub Cnt	Subcode/Source	SHIFT + TIMER AV	Shift + AV
Position Index	Index/Position	APP MEDIA	Media
Sleep Hold	Hold/Sleep	PROG SLEEP	Sleep

