



Originale	Sostituto
Power	Power
Tv/AV	AV / Input / RDS
1	1
2	2
3	3
Eject	Eject / Surround
4	4
5	5
6	6
Play/Pause	Play / Slow
7	7
8	8
9	9
Stop	Stop / Hold
0	0
-/--	Shift + Guide / EPG / -/--
Return	Back / Return

Originale	Sostituto
Mute	Mute / Dimmer
Vol-	Vol-
Up	Up
CH+	CH+ / Page+
Vol+	Vol+
Left	Left
OK	OK
Right	Right
Sys Menu	D.Menu / Top
CH-	CH- / Page-
Down	Down
Display	Display / Media
Picture	Picture / Format
Sound	Sound / Title
Timer	Sleep / Timer
Nicam/A2	Audio / Lang I/II
Lan/Prog-	Shift + CH- / Page-





Originale	Sostituto
Zoom/Prog+	Shift + CH+ /
Sub	Subtitle / EQ
Goto	Text / Goto
SET/Tv/TXT/DVB-	Setup / OPT /
Menu/Cancel/Tv Format	Menu / Home
ANG/Reveal/Exit	Exit / Cancel / Clear
Title/info	Shift + Sound / Title
<</Hold/Languag	<< / Tune-
>>/Size/Text	>> / Tune+
<</Subpage	<< / Preset-
FAV	Fav / Marker / PC
>> /Index	>>  / Preset+
EPG	Guide / EPG / -/--
Red/Pro	Red / Netflix / Search
Tv/Radio	TV/Radio /
Green/Slow/Audio	Green / APP / Repeat
Yellow/Rep/Freeze	Yellow / YouTube / Repeat

Originale	Sostituto
Blue/A-B/Subtitle	Blue / Prime Video / Random

