



 





 













Originale	Sostituto
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	Guide
Return	Back
TV/AV	AV
Timer	Shift + AV
Picture	Format
Sound	Dual

Originale	Sostituto
Vol+	Vol +
Vol-	Vol -
Mute	Mute
UP/CH+	Up
Down/CH-	Down
Right	Right
Left	Left
OK	Ok
Sys Menu	Menu
Display	Shift + Info
TV/TXT/Hold	Media
Cancel/Size	3D
Reveal	Eject
Nicam/A2	Options
Prog+	Ch +
Prog-	Ch -
Subpage	List





Originale		Sostituto		Originale		Sostituto	
	Index		Smart				
	DVB Menu		D. Menu				
	Tv/Radio		TV/R				
	Exit		Exit				
	Info		Info				
	Subtitle		Subt				
	FAV		Pre Ch				
	Text		Text				
	EPG		Shift + Guide				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				

