



Originale	Sostituto	Originale	Sostituto
Power	Power	Vol+	Vol +
1	1	Vol-	Vol -
2	2	Mute	Mute
3	3	UP/CH+	Up
4	4	Down/CH-	Down
5	5	Right	Right
6	6	Left	Left
7	7	OK	Ok
8	8	Sys Menu	Menu
9	9	Display	Shift + Info
0	0	TV/TXT/Hold	Media
-/--	Guide	Cancel/Size	3D
Return	Back	Reveal	Eject
TV/AV	AV	Nicam/A2	Options
Timer	Shift + AV	Prog+	Ch +
Picture	Format	Prog-	Ch -
Sound	Dual	Subpage	List

Originale	Sostituto	Originale	Sostituto
Power	Power	Vol+	Vol +
1	1	Vol-	Vol -
2	2	Mute	Mute
3	3	UP/CH+	Up
4	4	Down/CH-	Down
5	5	Right	Right
6	6	Left	Left
7	7	OK	Ok
8	8	Sys Menu	Menu
9	9	Display	Shift + Info
0	0	TV/TXT/Hold	Media
-/--	Guide	Cancel/Size	3D
Return	Back	Reveal	Eject
TV/AV	AV	Nicam/A2	Options
Timer	Shift + AV	Prog+	Ch +
Picture	Format	Prog-	Ch -
Sound	Dual	Subpage	List





Originale	Sostituto	Originale	Sostituto
INDEX	Smart		Smart
DVB Menu	D. Menu		D. Menu
Tv/Radio	TV/R		TV/R
Exit	Exit		Exit
Info	Info		Info
Subtitle	Subt		Subt
FAV	Pre Ch		Pre Ch
Text	Text		Text
EPG	Shift + Guide	+	Shift + Guide
Red	Red		Red
Green	Green		Green
Yellow	Yellow		Yellow
Blue	Blue		Blue

Originale	Sostituto

