
 
 






 

 






 

 




 
 


 








Originale	Sostituto	Originale	Sostituto
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 Pause	Menu Off	 Exit
Subt.List	 Subt	Menu Down	 Down
Reveal	 Play	Back	 Back
Sleep Timer	 Sleep	Menu audio	 Dual
Txt Stop	 Stop	Volume+	 Vol +
Return TV	 TV/R	Chan.Up	 Ch +
Info	 Info	Volume-	 Vol -
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Menu Left	 Left	6	 6
Display	 Shift + Info	7	 7



Originale	Sostituto	
8		8
9		9
Guide -/-- 1.		Guide
0/10		0
2.Fav P/C 2.		Pre Ch
Mix Scan	 + 	Shift + Media
Off/Tim	 + 	Shift + List
Bright+ Mode		Options
On/Tim		List
Color+ P.Std		Format
Aft/Caf	 + 	Shift + Smart
Rotate Text	 + 	Shift + Format
Tone-		I<<
Audio-	 + 	Shift + Vol -
Store		Smart
Audio+	 + 	Shift + Vol +
Color- S.Std	 + 	Shift + Dual

Originale	Sostituto	
Tune-		<<
Red		Red
Tune+		>>
Green		Green
Yellow		Yellow
Tone+		>>I
Blue		Blue
Store Text	 + 	Shift + Text
AV 2	 + 	Shift + AV
Browse		Media
Search	 + 	Shift + TV/R
Disp		3D
Contrast+	 + 	Shift + Ch +
Contrast-	 + 	Shift + Ch -
Surround	 + 	Shift + Red
Nicam/Mono	 + 	Shift + Green
Level L	 + 	Shift + Yellow



Originale	Sostituto	Originale	Sostituto
Level R/Woofers	 +  Shift + Blue		

