






































Originale	Sostituto
 Power	 Power
 Open/Close	 Eject
 VCR	 Smart
 DVD	 Media
 Input	 AV
 1/Tracking-	 1
 2	 2
 3/Tracking+	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 System	 D. Menu
 Clear	 Exit

Originale	Sostituto
 Setup	 Options
 Display	 Info
 Title/PBC	 Back
 Menu	 Menu
 Up/PR+	 Up
 Down/PR-	 Down
 Right	 Right
 Left	 Left
 OK/Enter	 Ok
 Subtitle	 Subt
 Audio	 Dual
 Search	 Shift + TV/R
 Zoom	 Shift + Eject
 <<	 <<
 Play	 Play
 Pause	 Pause
 >>	 >>





Originale		Sostituto		Originale		Sostituto	
	I<<		I<<				
	Stop		Stop				
	>>I		>>I				
	Rec		Rec				
	Speed		Format				
	Repeat		Text				
	A-B		Red				
	Tv/VCR		TV/R				
	3D		3D				
	Mark		List				
	Angle		Guide				
	CM Skip		Yellow				
	Replay		Green				
	Last CH		Pre Ch				
	Program		Sleep				

