



 

 

 

 
 
 


 





 




Originale	Sostituto	Originale	Sostituto
 Power	 Power	 <<	 <<
 Eject	 Eject	 Play	 Play
 Tv/VCR	 TV/R	 >>	 >>
 AV	 AV	 Pause/Still	 Pause
 CM Skip	 Smart	 Stop	 Stop
 1	 1	 LP	 Format
 2	 2	 i	 Info
 3	 3	 OK/CLK/CNT	 Ok
 4	 4	 Rec/OTR	 Rec
 5	 5	 Clear	 Exit
 6	 6	 Up	 Up
 7	 7	 Down	 Down
 8	 8	 Right	 Right
 9	 9	 Left	 Left
 0	 0	 C.Lock	 Blue
 ez Power Off	 Media		
 ez Repeat	 Text		

Originale	Sostituto	Originale	Sostituto
 Power	 Power	 <<	 <<
 Eject	 Eject	 Play	 Play
 Tv/VCR	 TV/R	 >>	 >>
 AV	 AV	 Pause/Still	 Pause
 CM Skip	 Smart	 Stop	 Stop
 1	 1	 LP	 Format
 2	 2	 i	 Info
 3	 3	 OK/CLK/CNT	 Ok
 4	 4	 Rec/OTR	 Rec
 5	 5	 Clear	 Exit
 6	 6	 Up	 Up
 7	 7	 Down	 Down
 8	 8	 Right	 Right
 9	 9	 Left	 Left
 0	 0	 C.Lock	 Blue
 ez Power Off	 Media		
 ez Repeat	 Text		

