





 





 

 



 
 
 

 















Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Tv/Radio	 TV/Radio /
 0	 0
 ←PR	 Back / Return
 EPG	 Guide / EPG / -/--
 Up	 Up
 PR+	 CH+ / Page+

Originale	Sostituto
 Menu	 Menu / Home
 Vol-	 Vol-
 Left	 Left
 OK/List	 OK
 Right	 Right
 Vol+	 Vol+
 Info	 Info / Angle
 PR-	 CH- / Page-
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Audio	 Audio / Lang I/II
 ↑	 >> / Tune+
 Yellow	 Yellow / YouTube / Repeat
 [...]	 Subtitle / EQ
 ↓	 << / Tune-
 Blue	 Blue / Prime Video / Random





Originale	Sostituto	Originale	Sostituto
 Audio L/R	 Setup / OPT /		
 TXT	 Text / Goto		
 Green	 Green / APP / Repeat		
 Pause	 Pause / Step / Freeze		
 [+]	 Zoom / Size		
 FAV	 Fav / Marker / PC		
 UHF	 Smart / List		
 PAL/NTSC	 Picture / Format		
 TV/AV	 AV / Input / RDS		

Originale	Sostituto

