



Originale	Sostituto
Power	Power
Netflix	+ Shift + Red / Netflix /
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
TV	TV/Radio /
0	0
Recall	Fav / Marker / PC
Vol+	Vol+
Mute	Mute / Dimmer
PR+	CH+ / Page+

Originale	Sostituto
Vol-	Vol-
i	Info / Angle
PR-	CH- / Page-
Menu	Menu / Home
Up	Up
Q.Menu	D.Menu / Top
Left	Left
OK	OK
Right	Right
Back	Back / Return
Down	Down
EXit	Exit / Cancel / Clear
World	Smart / List
Camera/Music/Ph	Display / Media
Guide	Guide / EPG / -/--
*/o	Picture / Format
Games	AV / Input / RDS





Originale	Sostituto	Originale	Sostituto
[=]/Text	GOTO TEXT Text / Goto		
Red	NETFLIX SEARCH Red / Netflix / Search		
Green	APP REPEAT Green / APP / Repeat		
Yellow	YouTube REPEAT A-B Yellow / YouTube / Repeat		
Blue	Prime Video RANDOM Blue / Prime Video / Random		
LANG.	LANG I/II AUDIO Audio / Lang I/II		
[=]..	EQ SUBTITLE Subtitle / EQ		
[-O-]	SIZE ZOOM Zoom / Size		
<<	TUNE- << / Tune-		
Pause	STEP-FREEZE Pause / Step / Freeze		
>>	TUNE+ >> / Tune+		
Rec	REC MODE Rec / Rec Mode		
Play	SLOW Play / Slow		
Stop	HOLD Stop / Hold		

Originale	Sostituto

