

 
 



 



 





 



 






 


 

 


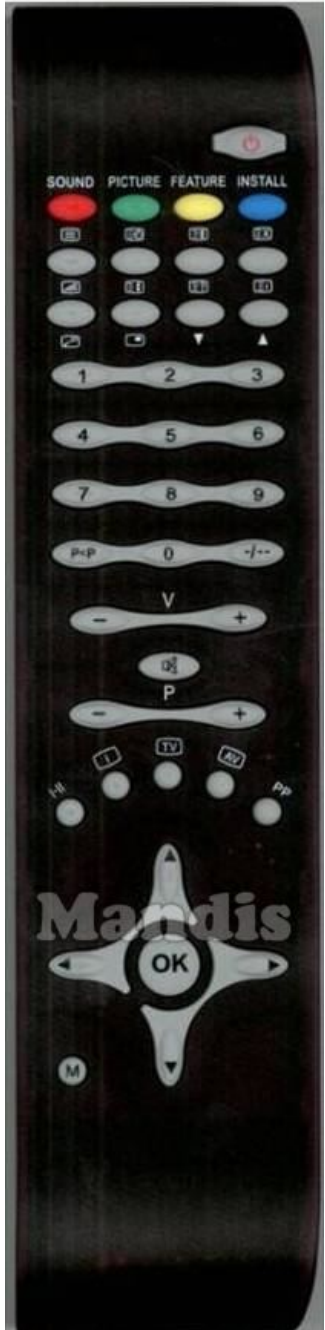 


Originale	Sostituto	Originale	Sostituto
 Power	 Power	 5	 5
 Red/Sound	 Red	 6	 6
 Green/Picture	 Green	 7	 7
 Yellow/Feature	 Yellow	 8	 8
 Blue/Install	 Blue	 9	 9
 [=]	 Text	 0	 0
 [=O]	 Options	 P<P	 Pre Ch
 [=+]	 Format	 -/--	 Guide
 [=X]	 Smart	 Vol+	 Vol +
 [.=]/[■]	 Subt	 Vol-	 Vol -
 [=◆]/[■]	 Media	 Mute	 Mute
 [=?]/↓	 3D	 P+	 Ch +
 [=i]/↑	 List	 P-	 Ch -
 1	 1	 I-II	 Dual
 2	 2	 [i]	 Info
 3	 3	 TV	 TV/R
 4	 4	 AV	 AV





	Originale	Sostituto	Originale	Sostituto
	PP	 Back		
	Up	 Up		
	Down	 Down		
	Right	 Right		
	Left	 Left		
	OK	 Ok		
	M	 Menu		

