














 




























Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Source	 AV / Input / RDS
 Mute	 Mute / Dimmer	 Home	 Menu / Home
 Play / Pause	 Play / Slow	 Up	 Up
 Play / Pause	 Pause / Step / Freeze	 Down	 Down
 Stop	 Stop / Hold	 Right	 Right
 Rec	 Rec / Rec Mode	 Left	 Left
 <<	 << / Tune-	 OK	 OK
 >>	 >> / Tune+	 Del	 Exit / Cancel / Clear
 <<	 I<< / Preset-	 Blue / Info	 Info / Angle
 >>	 >>I / Preset+	 Back	 Back / Return
 :Q	 Sound / Title	 Vol+	 Vol+
 TV Play	 Eject / Surround	 Vol-	 Vol-
 Format	 Picture / Format	 Internet	 Smart / List
 Live TV	 TV/Radio /	 CH+	 CH+ / Page+
 ≡	 D.Menu / Top	 CH-	 CH- / Page-
 ⚙	 Setup / OPT /	 Mouse	 Display / Media
 Green / TTX	 Text / Goto	 1	 1

Originale	Sostituto	Originale	Sostituto
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
 www.mandis.tv			





Originale	Sostituto	Originale	Sostituto
2	2	DVD 2	2
3	3	CD - STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
0	0	HDMI - SAT 0	0
Red / EPG	Red / EPG	GUIDE EPG	Guide / EPG / -/--
←]	←]	PC FAV MARKER	Fav / Marker / PC
Red / EPG	Red / EPG	NETFLIX SEARCH	Red / Netflix / Search
Green / TTX	Green / TTX	APP REPEAT	Green / APP / Repeat
Yellow / FAV	Yellow / FAV	YouTube REPEAT A-B	Yellow / YouTube / Repeat
Blue / Info	Blue / Info	Prime Video RANDOM	Blue / Prime Video / Random
Yellow / FAV	Yellow / FAV	SHIFT + PC FAV MARKER	Shift + Fav / Marker / PC

Originale	Sostituto

