


 



 

 


 
 
 


 
 
 







 
 
 

 






Originale	Sostituto
 Power	 Power
 Sleep	 Sleep
 Mute	 Mute
 Mode	 Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide
 Back	 Back
 Nicam/A2	 Dual

Originale	Sostituto
 TXT/MIX	 Text
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 Rec	 Rec
 >>/Index	 >>
 <</Hold	 <<
 I<<	 I<<
 >>I	 >>I
 Cancel	 Exit
 Menu	 Menu
 DTV/Radio	 TV/R
 Vol+	 Vol +
 Vol-	 Vol -
 Up	 Up
 Down	 Down
 Right	 Right






 

 



 





 
 


Originale	Sostituto
	Left
	Ok
	Ch +
	Ch -
	Pre Ch
	Guide
	Info
	List
	Red
	Green
	Yellow
	Blue
	Format
	3D
	Subt
	AV
	Shift + Ch +

Originale	Sostituto
	Shift + Ch -





Originale	Sostituto	Originale	Sostituto
Power		Power	Power
Mute		Mute	Mute
[I]/Menu		Menu	Menu
Exit		Exit	Exit
Source		AV	AV
1		1	1
2		2	2
3		3	3
4		4	4
5		5	5
6		6	6
7		7	7
8		8	8
9		9	9
0		0	0
Subtitle		Subt	Subt
Text		Text	Text

Originale	Sostituto	Originale	Sostituto
Vol+		Vol +	Vol +
Vol-		Vol -	Vol -
CH+		Ch +	Ch +
CH-		Ch -	Ch -
Up		Up	Up
Down		Down	Down
Right		Right	Right
Left		Left	Left
OK		Ok	Ok
Recall		Back	Back
Info		Info	Info
EPG		Guide	Guide
Freeze		Options	Options
Red		Red	Red
Green		Green	Green
Yellow		Yellow	Yellow
Blue		Blue	Blue





Originale	Sostituto	
Audio	 SOUND DUAL	Dual
I<</[≡+]		I<<
>>I/[≡..]		>>I
[≡i]	 HOME SMART	Smart
Play	 PLAY MODE	Play
Pause		Pause
Stop		Stop
REP/Rec	 REC MODE	Rec
<</[≡o]		<<
>>/[≡?]		>>
FAV	 FAV PRE-CH	Pre Ch

Originale	Sostituto

