



	Originale	Sostituto
	Power	Power
	Back	Back / Return
	Mode	Menu / Home
	CH-	CH- / Page-
	CH+	CH+ / Page+
	EQ	Subtitle / EQ
	I<<	I<< / Preset-
	>>I	>>I / Preset+
	Play	Play / Slow
	Pause	Pause / Step / Freeze
	Vol-	Vol-
	Vol+	Vol+
	0	0
	1	1
	2	2
	3	3
	4	4

	Originale	Sostituto
	5	5
	6	6
	7	7
	8	8
	9	9

