







































Originale	Sostituto
Power	Power
Eject	Eject / Surround
Tv/Radio	TV/Radio /
Red/Goto	Red / Netflix / Search
Red/Goto	+  Shift + Text /
Green/Angle	Info / Angle
Green/Angle	Green / APP / Repeat
Yellow/Repeat	+  Shift + Green / APP /
Yellow/Repeat	Yellow / YouTube / Repeat
Blue/A-B	+  Shift + Blue / Prime
Blue/A-B	Blue / Prime Video / Random
FAV	Fav / Marker / PC
Text	Text / Goto
Freeze/Hold	+  Shift + Stop /
Freeze/Hold	+  Shift + Pause / Step /
EPG	Guide / EPG / -/--
D.Menu	D.Menu / Top

Originale	Sostituto
Subtitle	Subtitle / EQ
Zoom/Size	Zoom / Size
Aspect	+  Shift + Picture / Format
Subpage	+  Shift + Subtitle / EQ
Media	+  Shift + Display / Media
Play	Play / Slow
Pause	Pause / Step / Freeze
<<	<< / Tune-
>>	>> / Tune+
Rec	Rec / Rec Mode
D.Setup	Setup / OPT /
Stop	Stop / Hold
I<<	I<< / Preset-
I>>/Index	I>> / Preset+
I>>/Index	Smart / List
Menu	Menu / Home
Lang/Audio	Audio / Lang I/II





Originale	Sostituto
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Sleep	 Sleep / Timer
 Down	 Down
 Title/Exit	 Shift + Sound / Title
 Title/Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Display	 Display / Media
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3

Originale	Sostituto
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 Shift + Guide / EPG / -/--
 Recall	 0
 Source	 Back / Return
 P.Mode	 AV / Input / RDS
 S.Mode	 Picture / Format
	 Sound / Title

