



Originale	Sostituto
	Mute / Dimmer
	Power
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Info / Angle
	0
	AV / Input / RDS
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat

Originale	Sostituto
	Blue / Prime Video / Random
	Setup / OPT /
	Up
	Menu / Home
	Left
	OK
	Right
	Text / Goto
	Down
	Back / Return
	CH+ / Page+
	Vol+
	CH- / Page-
	Vol-
	Smart / List
	<< / Tune-
	TV/Radio /





Originale	Sostituto
Play	Play / Slow
Guide/[♦]	Guide / EPG / --
>>	>> / Tune+
[~]/Timer	Display / Media
Rec/Top Menu	D.Menu / Top
Rec/Top Menu	Rec / Rec Mode
I-II/[X]	Audio / Lang I/II
Stop	Stop / Hold
[...]/[≡i]	Subtitle / EQ
Pause	Pause / Step / Freeze
Zoom	Zoom / Size
(↔)	Sound / Title

Originale	Sostituto

















 





Originale		Sostituto	
	Power		Power
	Up		Up
	Menu		Menu / Home
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Back		Back / Return
	↑		CH+ / Page+
	↓		CH- / Page-
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Rec/Top Menu		D.Menu / Top
	Rec/Top Menu		Rec / Rec Mode
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze

Originale		Sostituto	





Originale		Sostituto		Originale		Sostituto	
	Power		Power				
	Up		Up				
	Down		Down				
	<<		<< / Tune-				
	Play		Play / Slow				
	>>		>> / Tune+				
	Rec		Rec / Rec Mode				
	Stop		Stop / Hold				
	Pause		Pause / Step / Freeze				

