




 

 
 


 
 



 



 
 









 




 


 
 


 











 

 






 







Originale		Sostituto		Originale		Sostituto	
	Standby/On		Power		Menu/Bluetooth Setting		Menu
	1		1		Gt.AMP Mode		D. Menu
	2		2		Cancel		Exit
	3		3		Up		Up
	4		4		Down		Down
	5		5		>>/>>		>>
	6		6		<</<<		<<
	7		7		SET		Ok
	8		8		Tuner		TV/R
	9		9		Audio In		3D
	10		0		Play/Pause		Red
	+10		Guide		Play/Pause CD		Play
	+100		Pre Ch		Play/Pause iPod		Green
	Display		Info		Play/Pause Bluetooth		Pause
	Sleep		Sleep		Play/Pause Metronome		Yellow
	A.P.S.		Media		Stop		Stop
	Clock/Timer		AV		FM Mode		Format



