


 

 



 

 

 

 

 

 

 



 

 

 



 




Originale	Sostituto
 (AC) Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 10	 0
 +10	 Guide
 Sleep	 Sleep
 Display	 Info
 Auto Preset	 Subt
 Intro	 Ok
 Repeat	 Text

Originale	Sostituto
 Program	 Shift + Sleep
 Stop	 Stop
 Clear	 Exit
 Play	 Play
 Pause	 Pause
 Open/Close	 Eject
 Tuner Band	 TV/R
 Stereo/Auto/mono	 Dual
 Search >>I	 >>I
 I<< Search	 I<<
 Up	 Up
 Down	 Down
 Bass	 Back
 Tone	 Media
 Vol+	 Vol +
 Vol-	 Vol -

