



 




Originale	Sostituto	Originale	Sostituto
 Standby / On	 Power	 Menu	 Menu
 Open / Close	 Eject	 Up	 Up
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 Left	 Left
 4	 4	 Enter	 Ok
 5	 5	 Choice	 Media
 6	 6	 Display	 Info
 7	 7	 I<< Previous	 I<<
 8	 8	 >>I Next	 >>I
 9	 9	 Stop / Clear	 Stop
 0	 0	 Play / Select	 Play
 10	 Pre Ch	 Pause / Strobe	 Pause
 +10	 Guide	 << / Slow -	 <<
 Return	 Back	 >> / Slow +	 >>
 Cancel	 Exit	 Play Mode	 Shift + Play
 Top Menu	 Shift + Menu	 Subtitle	 Subt





Originale	Sostituto	Originale	Sostituto
 Audio	 Dual		
 Theater Position	 Options		
 3D Phonic	 3D		
 Digest	 Text		
 Angle	 Format		
 Zoom	 Shift + Eject		

