



Originale	Sostituto
TV Direct	TV/Radio /
Power Audio	Audio / Lang I/II
Power DVR/DVD	OK
Power VCR	Shift + Power
Power STB	Power
Power TV	Shift + OK
DVR/DVD	Fav / Marker / PC
VCR	Shift + Guide / EPG / -/-
TV	Shift + TV/Radio / Program
FM/AM	Smart / List
Video	Shift + Red / Netflix /
Tv/Video	Red / Netflix / Search
Muting	Mute / Dimmer
Channel+	CH+ / Page+
Vol+	Vol+
Channel-	CH- / Page-
Vol-	Vol-

Originale	Sostituto
Play VCR	Play / Slow
<< VCR	<< / Tune-
Stop/Memory	Stop / Hold
Pause VCR	Pause / Step / Freeze
>> VCR	>> / Tune+
Smart Surround/Setup	Setup / OPT /
Display/On	Display / Media
1 VCR	Shift + 1
1 STB	1
AD Input	AV / Input / RDS
2 VCR	Shift + 2
2 STB	2
Decode	Shift + D.Menu / Top Menu
3 VCR	Shift + 3
3 STB	3
4 VCR	Shift + 4
4 STB	4





	Originale	Sostituto
BASS BOOST 4	Bass Boost	SHIFT + LANG III / AUDIO Shift + Audio / Lang I/II
C.TONE 5	5 VCR	SHIFT + TAPE 5 Shift + 5
C.TONE 5	5 STB	TAPE 5 5
C.TONE 5	C. Tone	TITLE SOUND Sound / Title
MIDNIGHT 6	6 VCR	SHIFT + TUNER 6 Shift + 6
MIDNIGHT 6	6 STB	TUNER 6 6
MIDNIGHT 6	Midnight	SHIFT + LIST SMART Shift + Smart / List
7	7 VCR	SHIFT + AUX - HDD 7 Shift + 7
7	7 STB	AUX - HDD 7 7
A.POSITION 8	8 VCR	SHIFT + USB 8 Shift + 8
A.POSITION 8	8 STB	USB 8 8
A.POSITION 8	A. Position	YouTube REPEAT A-B Yellow / YouTube / Repeat
9	9 VCR	SHIFT + BLUETOOTH 9 Shift + 9
9	9 STB	BLUETOOTH 9 9
SLIDE EFFECT ANGLE	Effect	TOP MENU D.MENU D.Menu / Top
0	0 VCR	SHIFT + HDMI - BAT 0 Shift + 0
0	0 STB	HDMI - BAT 0 0

	Originale	Sostituto
100+ +10	+10 TV	GUIDE EPG Guide / EPG / -/-
DIMMER DISPLAY	Display/Dimmer	SHIFT + MEDIA DISPLAY Shift + Display / Media
SURROUND	Surround	SURROUND Eject / Surround
SLEEP	Sleep	TIMER SLEEP Sleep / Timer
REC PAUSE	Rec Pause	REC MODE Rec / Rec Mode
+ L-FRONT	Front L+	Up
+ FRONT-R	Front R+	SHIFT + Up Shift + Up
+ CENTFR	Center+	SHIFT + TUNE+ Shift + >> /
TEST TONE	Test Tone	GOTO TEXT Text / Goto
- L-FRONT	Front L-	Down
- FRONT-R	Front R-	SHIFT + Down Shift + Down
- CENTEF	Center-	SHIFT + TUNE- Shift + << /
D.EQ FREQ	D.EQ.Freq	FORMAT PICTURE Picture / Format
+ L-SURR	Surr L+	SHIFT + Right Shift + Right
+ SURR-R	Surr R+	Right
+ SUBWFR	Subwfr+	SHIFT + CH PAGE Shift + CH+ /
+ D.EQ LEVEL	D.EQ.Level+	SHIFT + VOL Shift + Vol+





Originale	Sostituto
L-SURF Surr L-	+ Shift + Left
JRR-R Surr R-	Left
SUBWFR Subwfr-	+ Shift + CH- /
D.EQ.LEVEL- D.EQ.Level-	+ Shift + Vol-

Originale	Sostituto





Originale	Sostituto
Power Audio	Shift + Power
Power Tv	Power
FM/AM	Eject / Surround
Tv Vol+	Vol+
Channel+ TV	CH+ / Page+
Tv Vol-	Vol-
Channel- TV	CH- / Page-
I<</Tuning-	I<< / Preset-
FM Mode FM/AM	Shift + TV/Radio / Program
>>I/Tuning+	>>I / Preset+
Memory FM/AM	Shift + Smart / List
TA/News/Info	Smart / List
PTY- FM/AM	TV/Radio /
PTY+ FM/AM	Guide / EPG / -/-
PTY Search	Red / Netflix / Search
Display FM/AM	Display / Media
1 FM/AM	Shift + 1

Originale	Sostituto
1 TV	1
2 FM/AM	Shift + 2
2 TV	2
3 FM/AM	Shift + 3
3 TV	3
4 FM/AM	Shift + 4
4 TV	4
5 FM/AM	Shift + 5
5 TV	5
6 FM/AM	Shift + 6
6 TV	6
7 FM/AM	Shift + 7
7 TV	7
8 FM/AM	Shift + 8
8 TV	8
9 FM/AM	Shift + 9
9 TV	9






	Originale	Sostituto	
TV RETURN 10	10 FM/AM	SHIFT + PC FAV MARKER	Shift + Fav / Marker / PC
TV RETURN 10	10/Tv Return TV	SHIFT + HDMI - BAT 0	Shift + 0
0	0 TV	HDMI - BAT 0	0
100+ +10	+10/100+	SHIFT + GUIDE EPG	Shift + Guide / EPG / -/-
100+ +10	+10 TV	PC FAV MARKER	Fav / Marker / PC

	Originale	Sostituto





Originale	Sostituto
 Power DVD	 Power
 I<<	 I<< / Preset-
 Play	 Play / Slow
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 Top Menu	 D.Menu / Top
 Up	 Up
 Menu	 Menu / Home
 Left	 Shift + Left
 Enter	 OK
 Right	 Right
 Down	 Down
 On Screen	 Shift + Display / Media
 Audio	 Audio / Lang I/II

Originale	Sostituto
 Subtitle	 Subtitle / EQ
 DVD Zoom	 Zoom / Size
 HDD Sound Effect	 Sound / Title
 Set Up	 Setup / OPT /
 1	 1
 2	 2
 3	 3
 ←	 Left
 4	 4
 5	 5
 6	 6
 VFP Progressive	 Smart / List
 7	 7
 8	 8
 9	 9
 Angle/Slide Effect	 Info / Angle
 10	 Guide / EPG / -/-

 




Originale	Sostituto	Originale	Sostituto
	0		0
	+10		Fav / Marker / PC
	Return		Back / Return
	Title Group		Shift + Sound / Title
	Cancel		Exit / Cancel / Clear
	Display/Dimmer		Display / Media

Originale	Sostituto



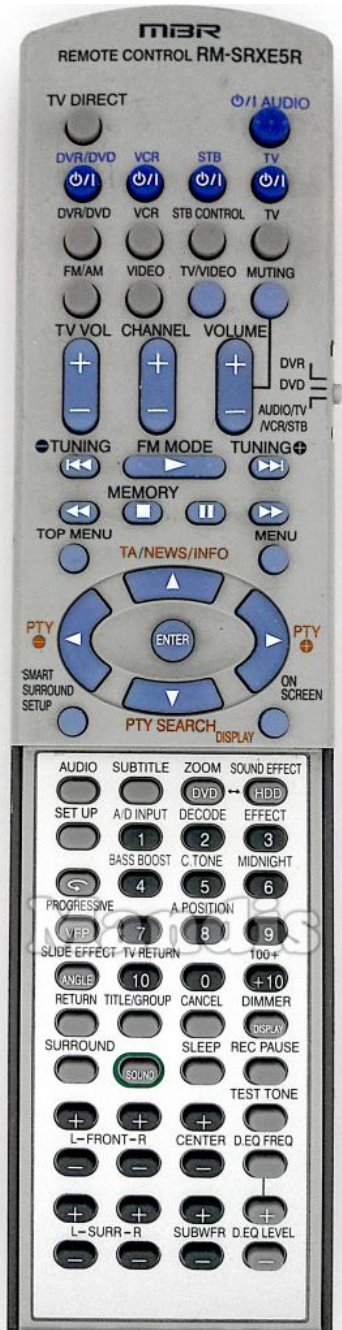







 





Originale	Sostituto
Power	Power
Channel+	CH+ / Page+
Channel-	CH- / Page-
I<<	I<< / Preset-
Play	Play / Slow
>>I	>>I / Preset+
<<	<< / Tune-
Stop	Stop / Hold
Pause	Pause / Step / Freeze
>>	>> / Tune+
Top Menu	D.Menu / Top
Up	Up
Menu	Menu / Home
Left	Shift + Left
Enter	OK
Right	Right
Down	Down

Originale	Sostituto
On Screen	Shift + Display / Media
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
DVD Zoom	Zoom / Size
HDD Sound Effect	Sound / Title
Set Up	Setup / OPT /
1	1
2	2
3	3
4	4
5	5
6	6
VFP Progressive	Smart / List
7	7
8	8
9	9





Originale Sostituto

 Angle/Slide Effect	 Info / Angle
 0	 0
 Return	 Back / Return
 Cancel	 Exit / Cancel / Clear
 Display/Dimmer	 Display / Media
 Rec Pause	 Rec / Rec Mode

Originale Sostituto

