





 
 

 



 





 
 
 


 

 




 







 
 



 


 
 



 







 



 
 





Originale	Sostituto	Originale	Sostituto
 Power	 Power	 S.A. Bass	 Options
 FM	 Smart	 Tape A	 Red
 AM	 Media	 Tape B	 Green
 1	 1	 Direction	 Pre Ch
 2	 2	 Repeat	 Text
 3	 3	 Pause	 Pause
 4	 4	 CD Control	 Yellow
 5	 5	 Play CD	 Play
 6	 6	 Stop CD	 Stop
 7	 7	 Rec Pause	 Rec
 8	 8	 Volume+	 Vol +
 9	 9	 Volume-	 Vol -
 10	 0	 I<< CD	 I<<
 +10	 Guide	 << CD	 <<
 Sleep	 Sleep	 >>I CD	 >>I
 Sound Mode	 Dual	 >> CD	 >>
 FM Mode	 TV/R	 Play Tape	 Shift + Play





Originale	Sostituto
Stop Tape	+ Shift + Stop
Tape Control	Blue
AUX	AV
>> Tape	+ Shift + >>
<< Tape	+ Shift + <<
Disc 1	Subt
Disc 2	Format
Disc 3	Eject
PTY/EON	Menu
Display Mode	Info
Select-	Ch -
Select+	Ch +
>> Tuning	Up
<< Tuning	Down
<< Tuning	Left
>> Tuning	Right
1 CD	+ Shift + 1

Originale	Sostituto
2 CD	+ Shift + 2
3 CD	+ Shift + 3
4 CD	+ Shift + 4
5 CD	+ Shift + 5
6 CD	+ Shift + 6
7 CD	+ Shift + 7
8 CD	+ Shift + 8
9 CD	+ Shift + 9
10 CD	+ Shift + 0
+10 CD	+ Shift + Guide

