


 

 
 
 




Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 << / [≡o]	 << / Tune-
 >> / [≡?]	 >> / Tune+
 << / [≡+]	 << / Preset-
 >> / [≡..]	 >> / Preset+
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 [≡i]	 Display / Media
 Text	 Text / Goto
 Subtitle	 Subtitle / EQ
 Freeze	 Shift + Pause / Step / Freeze

Originale	Sostituto
 Info	 Info / Angle
 Menu	 Menu / Home
 Source	 AV / Input / RDS
 EPG	 Guide / EPG / -/-
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 Vol+	 Vol+
 Vol-	 Vol-
 FAV	 Fav / Marker / PC
 Rec	 Rec / Rec Mode
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 1	 1





	Originale	Sostituto	Originale	Sostituto
	2	DVD 2		
	3	CD - STB 3		
	4	VIDEO 4		
	5	TAPE 5		
	6	TUNER 6		
	7	AUX - HDD 7		
	8	USB 8		
	9	BLUETOOTH 9		
	0	HDMI - BAT 0		
	AUDIO	LANG I/II AUDIO		
	RECALL	RETURN BACK		

