



Originale	Sostituto
Standby	Power
Mute	Mute
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0/10	0
Recall/+10	Pre Ch
Rec List	List
EPG	Guide
Subtitle	Subt
Audio	Dual

Originale	Sostituto
Display	Info
Tv/Radio	TV/R
Menu	Menu
Exit	Exit
Up	Up
Down	Down
Right	Right
Left	Left
OK	Ok
FAV	Shift + Pre Ch
Rec	Rec
Media	Media
Vol+	Vol +
Vol-	Vol -
CH+	Ch +
CH-	Ch -
Source	AV





Originale	Sostituto
PMode	+  Shift + Format
SMode	+  Shift + Dual
Sleep	Sleep
DVD Menu/Text	Text
A-B/Hold	3D
Goto/Reveal	Options
Play	Play
DVD	D. Menu
Pause/Timeshift	Pause
Stop	Stop
Open/Close/Index	Eject
Size	Format
<<	<<
>>	>>
l<<	l<<
>>l	>>l
Red	Red

Originale	Sostituto
Green/Angle	Green
Yellow/Repeat	Yellow
Blue/Title	Blue

