 







 

 

 

 

 

 

 

 































 










 






 







 





 




 





 



Originale	Sostituto
 Power	 Power
 Tuner	 Shift + 6
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 .	 Setup / OPT /
 Mute	 Mute / Dimmer
 You Tube	 Shift + Yellow / YouTube /
 Internet	 Display / Media

Originale	Sostituto
 Home	 Shift + Menu /
 Netflix	 Shift + Red / Netflix /
 Vol+	 Vol+
 Vol-	 Vol-
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 *	 Menu / Home
 Up	 Up
 Down	 Down
 Right/Zoom+	 Right
 Left/Zoom-	 Left
 OK	 OK
 Back	 Back / Return
 Exit	 Exit / Cancel / Clear
 Info	 Info / Angle
 USB	 Shift + 8
 =	 Text / Goto





Originale	Sostituto
 Sleep	 Sleep / Timer
 Guide	 Guide / EPG / -/--
 FAV	 Fav / Marker / PC
 CH.List	 Smart / List
 Picture	 Picture / Format
 Sound	 Sound / Title
 CC	 Subtitle / EQ
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 I<	 I<< / Preset-
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >I	 >>I / Preset+
 <<	 << / Tune-

Originale	Sostituto
 >>	 >> / Tune+
 MTS	 D.Menu / Top

