



 









 





 

 




 
 
 




Originale	Sostituto
 Power	 Power
 Display	 Display / Media
 Play/Pause iPad	 Play / Slow
 Play/Pause iPod	 Pause / Step / Freeze
 Tuner	 6
 PC	 Fav / Marker / PC
 Audio In	 Audio / Lang I/II
 Menu	 Menu / Home
 Cancel	 Exit / Cancel / Clear
 Up	 Up
 Down	 Down
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Set	 OK
 Stop	 Stop / Hold
 <<	 << / Tune-
 >>	 >> / Tune+

Originale	Sostituto
 Program	 TV/Radio /
 Random	 Blue / Prime Video / Random
 Repeat/Tuner	 Text / Goto
 Clock/Timer	 Shift + Sleep / Timer
 APS	 Zoom / Size
 Sleep	 Sleep / Timer
 Muting	 Mute / Dimmer
 Vol+	 Vol+
 Vol-	 Vol-
 Sound Turbo	 Shift + TV/Radio / Program
 HBS	 D.Menu / Top
 Sound Mode	 Sound / Title
 Surround	 Eject / Surround
 Resume	 Picture / Format
 Dimmer	 Shift + Mute / Dimmer

