 









 

 












 




 









Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Lang	 Audio / Lang I/II
 0	 0
 TXT	 Text / Goto
 V-	 Vol-
 V+	 Vol+
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+

Originale	Sostituto
 P-	 CH- / Page-
 Source	 AV / Input / RDS
 Home	 Menu / Home
 [G]	 Guide / EPG / -/-
 i	 Info / Angle
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Back	 Back / Return
 Exit	 Exit / Cancel / Clear
 Netflix	 Shift + Red / Netflix /
 YouTube	 Shift + Yellow / YouTube /
 prime video	 Shift + Blue / Prime
 Rakuten Tv	 TV/Radio /
 twitch	 Zoom / Size





Originale		Sostituto		Originale		Sostituto	
	*1		Setup / OPT /				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	<<		<< / Tune-				
	Stop		Stop / Hold				
	>>		>> / Tune+				
	Rec		Rec / Rec Mode				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				

