









Originale		Sostituto		Originale	Sostituto
	Power		Power		
	Tv Vol+		Vol+		
	CH+		CH+ / Page+		
	Tv Vol-		Vol-		
	CH-		CH- / Page-		
	1		1		
	2		2		
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	+10/100+		Guide / EPG / -/--		
	0		0		
	10/Tv Return		Fav / Marker / PC		





Originale	Sostituto
 Power	 Power
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 <<	 << / Tune-
 >>	 >> / Tune+
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Originale	Sostituto
 0	 0





Originale	Sostituto
 Power	 Power
 Muting	 Mute / Dimmer
 Play	 Play / Slow
 Pause/FM Mode	 Pause / Step / Freeze
 Stop/Memory	 Stop / Hold
 ←/Rec	 Rec / Rec Mode
 <<	 << / Tune-
 >>	 >> / Tune+
 I<</Tuning-	 I<< / Preset-
 >>I/Tuning+	 >>I / Preset+
 Surr.	 Sound / Title
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Open/Close	 Eject / Surround
 Page	 Picture / Format
 Zoom	 Zoom / Size
 Sleep	 Sleep / Timer

Originale	Sostituto
 Tv/Video	 TV/Radio /
 Setting	 D.Menu / Top
 Set Up	 Setup / OPT /
 VFP/Scan Mode	 AV / Input / RDS
 Menu	 Menu / Home
 Up	 Up
 Angle	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 Cancel	 Exit / Cancel / Clear
 Down	 Down
 Return	 Back / Return
 Audio Vol+	 Vol+
 S.WFR+	 CH+ / Page+
 Audio Vol-	 Vol-
 On Screen	 Display / Media





Originale	Sostituto	Originale	Sostituto
	S-WFR-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	+10/100+		Guide / EPG / -/--
	0		0
	10/Tv Return		Fav / Marker / PC
	Repeat		Green / APP / Repeat
	A-B RPT		Yellow / YouTube / Repeat
	AUX Digital		Blue / Prime Video / Random
	Dimmer		Shift + Mute / Dimmer

Originale	Sostituto	Originale	Sostituto
	Play Mode		Shift + Play /
	Title Group		Shift + Sound / Title
	FM/AM		Shift + TV/Radio / Program
	Top Menu		Shift + D.Menu / Top Menu
	Center+		Shift + Up
	Center-		Shift + Down
	L-Surr+		Shift + Vol+
	Treble+		Shift + CH+ /
	L-Surr-		Shift + Vol-
	Treble-		Shift + CH- /
	DVD		Shift + 2
	FL. Disp		Shift + 5
	AUX		Shift + 7
	Surr R+		Shift + 8
	Surr R-		Shift + 0

