



 


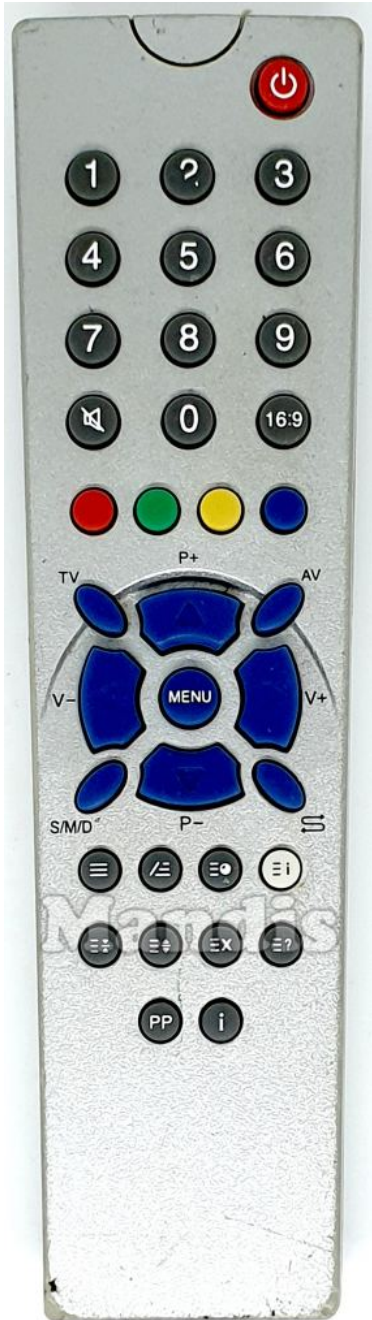




 









Originale	Sostituto
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Mute	Mute
16:9	Format
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue

Originale	Sostituto
TV	TV/R
AV	AV
Up / P+	Up
Up / P+	Ch +
Down / P-	Down
Down / P-	Ch -
Right / V+	Right
Right / V+	Vol +
Left / V-	Left
Left / V-	Vol -
Menu	Menu
Menu	Ok
S / M / D	Smart
Recall	Pre Ch
Recall	Back
≡	Text
/≡	Options





Originale		Sostituto	
	≡o	 SLEEP	Sleep
	≡i	 DISPLAY INFO	Info
	Hold	 II	Pause
	Size	 ZOOM ▲	Eject
	≡X	 CLEAR EXIT	Exit
	≡?	 E-MANUAL D.MENU	D. Menu
	PP	 APP MEDIA	Media
	i	 SHIFT +  DISPLAY INFO	Shift + Info

Originale		Sostituto	

