

 

 



 



 



 



 

 



 

 

 
 
 

 

 


 
 




 


 

 



 



 

 











Originale	Sostituto	Originale	Sostituto
 Power	 Power	 PR+	 CH+ / Page+
 TV	 Display / Media	 PR-	 CH- / Page-
 1	 1	 Source	 AV / Input / RDS
 2	 2	 Info	 Info / Angle
 3	 3	 Menu	 Menu / Home
 4	 4	 Guide	 Guide / EPG / -/--
 5	 5	 Tools	 Setup / OPT /
 6	 6	 Return	 Back / Return
 7	 7	 Up	 Up
 8	 8	 Down	 Down
 9	 9	 Right	 Right
 0	 0	 Left	 Left
 PRE-CH	 Shift + Fav / Marker / PC	 Enter	 OK
 Vol+	 Vol+	 CH List	 Smart / List
 FAV.CH	 Fav / Marker / PC	 Exit	 Exit / Cancel / Clear
 Vol-	 Vol-	 Red	 Red / Netflix / Search
 Mute	 Mute / Dimmer	 Green	 Green / APP / Repeat

Originale	Sostituto	Originale	Sostituto
 Power	 Power	 PR+	 CH+ / Page+
 TV	 Display / Media	 PR-	 CH- / Page-
 1	 1	 Source	 AV / Input / RDS
 2	 2	 Info	 Info / Angle
 3	 3	 Menu	 Menu / Home
 4	 4	 Guide	 Guide / EPG / -/--
 5	 5	 Tools	 Setup / OPT /
 6	 6	 Return	 Back / Return
 7	 7	 Up	 Up
 8	 8	 Down	 Down
 9	 9	 Right	 Right
 0	 0	 Left	 Left
 PRE-CH	 Shift + Fav / Marker / PC	 Enter	 OK
 Vol+	 Vol+	 CH List	 Smart / List
 FAV.CH	 Fav / Marker / PC	 Exit	 Exit / Cancel / Clear
 Vol-	 Vol-	 Red	 Red / Netflix / Search
 Mute	 Mute / Dimmer	 Green	 Green / APP / Repeat





Originale	Sostituto	Originale	Sostituto
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
TTX/MIX	Text / Goto		
AD	Audio / Lang I/II		
SUBT.	Subtitle / EQ		

Originale	Sostituto

