







Originale	Sostituto
	 Power
	 Stop / Hold
	 Pause / Step / Freeze
	 Rec / Rec Mode
	 << / Tune-
	 Play / Slow
	 >> / Tune+
	 Guide / EPG / -/--
	 Eject / Surround
	 Display / Media
	 AV / Input / RDS
	 TV/Radio /
	 Picture / Format
	 Menu / Home
	 Smart / List
	 Shift + Smart / List
	 Info / Angle

Originale	Sostituto
	 Up
	 Left
	 OK
	 Right
	 Exit / Cancel / Clear
	 Down
	 Setup / OPT /
	 Back / Return
	 CH- / Page-
	 CH+ / Page+
	 Vol-
	 Mute / Dimmer
	 Vol+
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random





Originale		Sostituto		Originale		Sostituto	
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	Subtitle		Subtitle / EQ				
	0		0				
	[≡]/Text		Text / Goto				

