


























 

 



 



























 





 




Originale	Sostituto	Originale	Sostituto
Power	 Power	CH / Guide	 Guide / EPG / -/--
Recall	 Back / Return	Up	 Up
CC	 Subtitle / EQ	M	 Menu / Home
Text	 Text / Goto	A / CH	 Info / Angle
Smart	 Smart / List	Down	 Down
Sleep	 Sleep / Timer	Vol+	 Vol+
1	 1	Vol-	 Vol-
2	 2	Left / -	 Left
3	 3	Right / +	 Right
4	 4	Mute	 Mute / Dimmer
5	 5	CH+	 CH+ / Page+
6	 6	CH-	 CH- / Page-
7	 7	A	 Red / Netflix / Search
8	 8	B	 Green / APP / Repeat
9	 9	C	 Yellow / YouTube / Repeat
0	 0	D	 Blue / Prime Video / Random
Reset	 Exit / Cancel / Clear	G	 Shift + Yellow / YouTube / Repeat








Originale	Sostituto	Originale	Sostituto
Power	 Power	CH / Guide	 Guide / EPG / -/--
Recall	 Back / Return	Up	 Up
CC	 Subtitle / EQ	M	 Menu / Home
Text	 Text / Goto	A / CH	 Info / Angle
Smart	 Smart / List	Down	 Down
Sleep	 Sleep / Timer	Vol+	 Vol+
1	 1	Vol-	 Vol-
2	 2	Left / -	 Left
3	 3	Right / +	 Right
4	 4	Mute	 Mute / Dimmer
5	 5	CH+	 CH+ / Page+
6	 6	CH-	 CH- / Page-
7	 7	A	 Red / Netflix / Search
8	 8	B	 Green / APP / Repeat
9	 9	C	 Yellow / YouTube / Repeat
0	 0	D	 Blue / Prime Video / Random
Reset	 Exit / Cancel / Clear	G	 Shift + Yellow / YouTube / Repeat





Originale

Sostituto


































 
 
Clock	 + 	Shift + Sleep / Timer
E	 + 	Shift + Red / Netflix /
F	 + 	Shift + Green / APP /
A / V		AV / Input / RDS

Originale

Sostituto





Originale	Sostituto	Originale	Sostituto
Power	 Power	Up	 Up
Recall	 Back / Return	CH / Guide	 Guide / EPG / -/-
CC	 Subtitle / EQ	Down	 Down
Text	 Text / Goto	M	 Menu / Home
Smart	 Smart / List	Vol+	 Vol+
Sleep	 Sleep / Timer	A / CH	 Info / Angle
1	 1	Vol-	 Vol-
2	 2	Mute	 Mute / Dimmer
3	 3	Left / -	 Left
4	 4	Right / +	 Right
5	 5	CH+	 CH+ / Page+
6	 6	CH-	 CH- / Page-
7	 7	A	 Red / Netflix / Search
8	 8	B	 Green / APP / Repeat
9	 9	C	 Yellow / YouTube / Repeat
0	 0	D	 Blue / Prime Video / Random
Reset	 Exit / Cancel / Clear	Clock	 +  Shift + Sleep / Timer





Originale

Sostituto
























 








E	SHIFT + NETFLIX SEARCH	Shift + Red / Netflix /
F	SHIFT + APP REPEAT	Shift + Green / APP /
G	SHIFT + YouTube REPEAT A-B	Shift + Yellow / YouTube /
A / V	RDS AV INPUT	AV / Input / RDS

Originale

Sostituto










Originale	Sostituto	Originale	Sostituto
Power	 Power	CH / Guide	 Guide / EPG / -/--
Recall	 Back / Return	Up	 Up
CC	 Subtitle / EQ	Down	 Down
Text	 Text / Goto	A / CH	 Info / Angle
Smart	 Smart / List	M	 Menu / Home
Sleep	 Sleep / Timer	Right / +	 Right
1	 1	Left / -	 Left
2	 2	Vol+	 Vol+
3	 3	Vol-	 Vol-
4	 4	Mute	 Mute / Dimmer
5	 5	CH+	 CH+ / Page+
6	 6	CH-	 CH- / Page-
7	 7	A	 Red / Netflix / Search
8	 8	B	 Green / APP / Repeat
9	 9	C	 Yellow / YouTube / Repeat
0	 0	D	 Blue / Prime Video / Random
Reset	 Exit / Cancel / Clear	E	 Shift + Red / Netflix / Search





Originale Sostituto

F	 + 	Shift + Green / APP /
G	 + 	Shift + Yellow / YouTube /
Clock	 + 	Shift + Sleep / Timer
A / V		AV / Input / RDS

Originale Sostituto

