


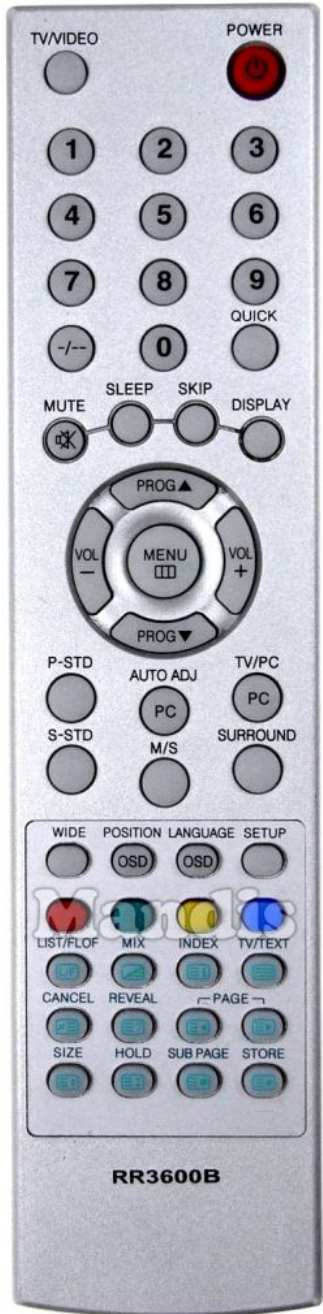

| Originale  | Sostituto |
|------------|-----------|
| Power      | Power     |
| TV / Video | AV        |
| 1          | 1         |
| 2          | 2         |
| 3          | 3         |
| 4          | 4         |
| 5          | 5         |
| 6          | 6         |
| 7          | 7         |
| 8          | 8         |
| 9          | 9         |
| 0          | 0         |
| /--        | Guide     |
| Quick      | Pre Ch    |
| Mute       | Mute      |
| Sleep      | Sleep     |
| Skip       | Exit      |

| Originale     | Sostituto      |
|---------------|----------------|
| Display       | Info           |
| Up / Prog +   | Ch +           |
| Up / Prog +   | Up             |
| Down / Prog - | Ch -           |
| Down / Prog - | Down           |
| Right / Vol + | Vol +          |
| Right / Vol + | Right          |
| Left / Vol -  | Vol -          |
| Left / Vol -  | Left           |
| Menu          | Menu           |
| Menu          | Ok             |
| P-STD         | Shift + Format |
| S-STD         | Dual           |
| PC Auto ADJ   | Smart          |
| PC / TV/PC    | Media          |
| M / S         | TV/R           |
| Surround      | Shift + Dual   |





| Originale    | Sostituto    |
|--------------|--------------|
| Wide         | Format       |
| OSD Position | 3D           |
| OSD Language | Shift + 3D   |
| Setup        | Options      |
| Red          | Red          |
| Green        | Green        |
| List / FLOF  | List         |
| Yellow       | Yellow       |
| Blue         | Blue         |
| Mix          | Shift + Text |
| Index        | Shift + Info |
| TV / Text    | Text         |
| Cancel       | Back         |
| Subpage      | Subt         |
| Reveal       | Play         |
| Page -       | I<<          |
| Page +       | >>I          |

| Originale | Sostituto     |
|-----------|---------------|
| Size      | Eject         |
| Hold      | Stop          |
| Store     | Shift + Smart |

