




 





 








Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Up	 Up
 Info	 Info / Angle	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 CH+	 CH+ / Page+
 4	 4	 Index	 Display / Media
 5	 5	 Vol+	 Vol+
 6	 6	 CH-	 CH- / Page-
 7	 7	 List	 Smart / List
 8	 8	 Vol-	 Vol-
 9	 9	 Fav / Marker / PC	 Fav / Marker / PC
 Source	 AV / Input / RDS	 Sleep	 Sleep / Timer
 0	 0	 EPG	 Guide / EPG / -/-
 O)/I-II/Audio	 Audio / Lang I/II	 Recall	 Back / Return
 Menu	 Menu / Home	 Red	 Red / Netflix / Search
 Exit	 Exit / Cancel / Clear	 << / Tune-	 << / Tune-

Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Power	 Power
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP-FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG I/II	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 SIZE	 TIMER	 TV RADIO
 PICTURE	 ZOOM	 SLEEP	 RDS
 TOP MENU	 OPT-TOOLS	 GOTO	 AV INPUT
 D.MENU	 SETUP	 TEXT	 HOME
 MENU	 ANGLE	 INFO	 INFO
 CLEAR	 OK	 RETURN	 RETURN
 EXIT	 OK	 BACK	 BACK
 CANCEL	 LIST	 CH PAGE	 CH PAGE
 VOL+	 SMART	 CH PAGE	 CH PAGE
 VOL-	 MEDIA DISPLAY	 CH PAGE	 CH PAGE
 TV	 SMART	 CH PAGE	 CH PAGE
 1	 MEDIA DISPLAY	 CH PAGE	 CH PAGE
 2	 DISPLAY	 CH PAGE	 CH PAGE
 3	 DISPLAY	 CH PAGE	 CH PAGE
 4	 DISPLAY	 CH PAGE	 CH PAGE
 5	 DISPLAY	 CH PAGE	 CH PAGE
 6	 DISPLAY	 CH PAGE	 CH PAGE
 7	 DISPLAY	 CH PAGE	 CH PAGE
8	DISPLAY	CH PAGE	CH PAGE
9	DISPLAY	CH PAGE	CH PAGE
0	DISPLAY	CH PAGE	CH PAGE
GUIDE EPG	DISPLAY	CH PAGE	CH PAGE
NETFLIX	DISPLAY	CH PAGE	CH PAGE
APP	DISPLAY	CH PAGE	CH PAGE
YouTube	DISPLAY	CH PAGE	CH PAGE
Prime Video	DISPLAY	CH PAGE	CH PAGE
SEARCH	DISPLAY	CH PAGE	CH PAGE
REPEAT	DISPLAY	CH PAGE	CH PAGE
REPEAT A-B	DISPLAY	CH PAGE	CH PAGE
RANDOM	DISPLAY	CH PAGE	CH PAGE













 

























Originale	Sostituto	Originale	Sostituto
 Green	 Green / APP / Repeat		
 >>	 >> / Tune+		
 Yellow	 Yellow / YouTube / Repeat		
 I<<	 I<< / Preset-		
 Blue	 Blue / Prime Video / Random		
 >>I	 >>I / Preset+		
 [=]	 Text / Goto		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 [=+]	 Zoom / Size		
 Stop/Still	 Stop / Hold		
 Radio	 TV/Radio /		
 [=◇]/[++]	 Setup / OPT /		
 [=x]	 Picture / Format		
 [=o]/Subtitle	 Subtitle / EQ		
 DMP	 D.Menu / Top		
 Rec	 Rec / Rec Mode		





Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 Text / Play/Pause	 Play / Slow
 Text / Play/Pause	 Pause / Step / Freeze
 Stop / Still	 Stop / Hold
 Rec	 Rec / Rec Mode
 Audio I/II	 Audio / Lang I/II
 Subtitle / [≡o]	 Subtitle / EQ
 [≡x]	 Picture / Format
 Size / Aspect	 Zoom / Size
 Sleep	 Sleep / Timer
 Radio	 TV/Radio /
 DMP	 D.Menu / Top
 Source	 AV / Input / RDS
 Menu	 Menu / Home
 Up	 Up
 Info	 Info / Angle

Originale	Sostituto
 Left	 Left
 Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Recall	 Back / Return
 Vol +	 Vol+
 List	 Smart / List
 CH +	 CH+ / Page+
 Vol -	 Vol-
 Index	 Display / Media
 CH -	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





Originale	Sostituto
 6	 6
 7	 7
 8	 8
 9	 9
 EPG	 Guide / EPG / -/-
 0	 0
 Fav	 Fav / Marker / PC
 Red / <<	 Red / Netflix / Search
 Green / >>	 Green / APP / Repeat
 Yellow /  <<	 Yellow / YouTube / Repeat
 Blue / >>	 Blue / Prime Video / Random
 Text / Play/Pause	 Shift + Play /
 Red / <<	 Shift + Red / Netflix /
 Green / >>	 Shift + Green / APP /
 Yellow /  <<	 Shift + Yellow / YouTube /
 Blue / >>	 Shift + Blue / Prime /

Originale	Sostituto

