



| Originale | | Sostituto | | Originale | | Sostituto | |
|---|-----------|---|-------------------------------|---|------------|---|-----------------------|
|  | Power |  | Power |  | Info |  | Info / Angle |
|  | Mute |  | Mute / Dimmer |  | [I]/Menu |  | Menu / Home |
|  | Red |  | Red / Netflix / Search |  | Up |  | Up |
|  | Green |  | Green / APP / Repeat |  | Source |  | AV / Input / RDS |
|  | Yellow |  | Yellow / YouTube / Repeat |  | Left |  | Left |
|  | Blue |  | Blue / Prime Video / Random |  | OK |  | OK |
|  | <</[≡o] |  | << / Tune- |  | Right |  | Right |
|  | >>/[≡?] |  | >> / Tune+ |  | Down |  | Down |
|  | I<</[≡+] |  | I<< / Preset- |  | EPG |  | Guide / EPG / -/- |
|  | >>I/[≡..] |  | >>I / Preset+ |  | Exit |  | Exit / Cancel / Clear |
|  | Play |  | Play / Slow |  | Vol+ |  | Vol+ |
|  | Pause |  | Pause / Step / Freeze |  | FAV |  | Fav / Marker / PC |
|  | Stop |  | Stop / Hold |  | CH+ |  | CH+ / Page+ |
|  | [≡i] |  | Smart / List |  | Vol- |  | Vol- |
|  | Text |  | Text / Goto |  | REP/Rec |  | Rec / Rec Mode |
|  | Subtitle |  | Subtitle / EQ |  | CH- |  | CH- / Page- |
|  | Freeze |  | Shift + Pause / Step / Freeze |  | 1 |  | 1 |





| Originale | | Sostituto | |
|-----------|--------|-----------------|-------------------|
| 2 | 2 | DVD 2 | 2 |
| 3 | 3 | CD - STB 3 | 3 |
| 4 | 4 | VIDEO 4 | 4 |
| 5 | 5 | TAPE 5 | 5 |
| 6 | 6 | TUNER 6 | 6 |
| 7 | 7 | AUX - HDD 7 | 7 |
| 8 | 8 | USB 8 | 8 |
| 9 | 9 | BLUETOOTH 9 | 9 |
| AUDIO | Audio | LANG I/II AUDIO | Audio / Lang I/II |
| 0 | 0 | HDMI - BAT 0 | 0 |
| RECALL | Recall | RETURN BACK | Back / Return |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

| Originale | | Sostituto | |
|-----------|--|-----------|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |


















 





| Originale | Sostituto |
|-----------|---|
| Power |  Power |
| Mute |  Mute / Dimmer |
| Play |  Play / Slow |
| Pause |  Pause / Step / Freeze |
| Stop |  Stop / Hold |
| Rec |  Rec / Rec Mode |
| <</Hold |  << / Tune- |
| >>/Index |  >> / Tune+ |
| I<< |  I<< / Preset- |
| >>I |  >>I / Preset+ |
| Nicam/A2 |  Audio / Lang I/II |
| Subtitle |  Subtitle / EQ |
| Subpage |  Eject / Surround |
| Size |  Zoom / Size |
| Sleep |  Sleep / Timer |
| DTV/Radio |  TV/Radio / |
| Reveal |  D.Menu / Top |

| Originale | Sostituto |
|-----------|---|
| TXT/MIX |  Text / Goto |
| Menu |  Menu / Home |
| Up |  Up |
| Info |  Info / Angle |
| Left |  Left |
| Enter |  OK |
| Right |  Right |
| Cancel |  Exit / Cancel / Clear |
| Down |  Down |
| Back |  Back / Return |
| Vol+ |  Vol+ |
| List |  Smart / List |
| CH+ |  CH+ / Page+ |
| Vol- |  Vol- |
| Mode |  Display / Media |
| CH- |  CH- / Page- |
| 1 |  1 |








| Originale | Sostituto | |
|-----------|---|-----------------------------|
| 2 |  | 2 |
| 3 |  | 3 |
| 4 |  | 4 |
| 5 |  | 5 |
| 6 |  | 6 |
| 7 |  | 7 |
| 8 |  | 8 |
| 9 |  | 9 |
| EPG |  | Guide / EPG / -/-- |
| 0 |  | 0 |
| FAV |  | Fav / Marker / PC |
| Red |  | Red / Netflix / Search |
| Green |  | Green / APP / Repeat |
| Yellow |  | Yellow / YouTube / Repeat |
| Blue |  | Blue / Prime Video / Random |
| <</Hold |  | Shift + Stop / |
| FAV- |  | Shift + Left |

| Originale | Sostituto | |
|-----------|---|----------------------------|
| FAV+ |  | Shift + Right |
| -/-- |  | Shift + Guide / EPG / -/-- |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |


















| Originale | Sostituto |
|------------|---|
| Power |  Power |
| Mute |  Mute / Dimmer |
| Play |  Play / Slow |
| Pause |  Pause / Step / Freeze |
| Stop |  Stop / Hold |
| Rec |  Rec / Rec Mode |
| <</[Timer] |  << / Tune- |
| >>/[≡?] |  >> / Tune+ |
| I<</[≡⇅] |  I<< / Preset- |
| >>I/[≡...] |  >>I / Preset+ |
| Audio |  Audio / Lang I/II |
| Subtitle |  Subtitle / EQ |
| I<</[≡⇅] |  Zoom / Size |
| <</[Timer] |  Sleep / Timer |
| Text |  Text / Goto |
| Source/Av |  AV / Input / RDS |
| [II] |  Menu / Home |

| Originale | Sostituto |
|-----------|---|
| Up |  Up |
| Info |  Info / Angle |
| Left |  Left |
| Ok |  OK |
| Right |  Right |
| Exit |  Exit / Cancel / Clear |
| Down |  Down |
| Recall |  Back / Return |
| Vol+ |  Vol+ |
| [≡i] |  Smart / List |
| Ch+ |  CH+ / Page+ |
| Vol- |  Vol- |
| Ch- |  CH- / Page- |
| 1 |  1 |
| 2 |  2 |
| 3 |  3 |
| 4 |  4 |





| Originale | Sostituto | Originale | Sostituto |
|-----------|---|-----------|-----------|
| 5 |  5 | | |
| 6 |  6 | | |
| 7 |  7 | | |
| 8 |  8 | | |
| 9 |  9 | | |
| Epg |  Guide / EPG / -/-- | | |
| 0 |  0 | | |
| Fav |  Fav / Marker / PC | | |
| Red |  Red / Netflix / Search | | |
| Green |  Green / APP / Repeat | | |
| Yellow |  Yellow / YouTube / Repeat | | |
| Blue |  Blue / Prime Video / Random | | |
| Freeze |  Shift + Pause / Step / | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

