




 

 


 
 

 


 






 




 








 






 


 


 
 
 
 
 
 
 

 

 
 







 




Originale		Sostituto		Originale		Sostituto	
	Power Receiver		Power		Vol-		Vol -
	Power DVD	 + 	Shift + Power		Tone		Pre Ch
	Sleep		Sleep		Sound	 + 	Shift + Dual
	Input Mode		AV		Dimmer		3D
	Setup		Options		Listen Mode		TV/R
	1		1		Active EQ		Red
	2		2		Multi Control		Ch -
	3		3		Multi Control Up		Ch +
	4		4		Mute		Mute
	5		5		Play/Pause/Ban		Play
	6		6		Stop/Auto/Mono		Stop
	7		7		I<</P. Call		I<<
	8		8		>>/I.P. Cal		>>I
	9		9		<< Tuning		<<
	0		0		>> Tuning		>>
	+10		Guide		Bass Boost		Green
	Vol+		Vol +		Loudness		Eject





Originale	Sostituto
 Tuner	 Media
 Video	 Yellow
 Game/F.Aux	 Info
 AUX	 Smart
 DVD	 Shift + Smart
 1 DVD	 Shift + 1
 2 DVD	 Shift + 2
 3 DVD	 Shift + 3
 4 DVD	 Shift + 4
 5 DVD	 Shift + 5
 6 DVD	 Shift + 6
 7 DVD	 Shift + 7
 8 DVD	 Shift + 8
 9 DVD	 Shift + 9
 0 DVD	 Shift + 0
 +10 DVD	 Shift + Guide
 Menu DVD	 Menu

Originale	Sostituto
 Enter DVD	 Ok
 Top Menu DVD	 Shift + Menu
 Up DVD	 Up
 Down DVD	 Down
 Right DVD	 Right
 Left DVD	 Left
 Return DVD	 Back
 On Screen DVD	 List
 Setup DVD	 Shift + Options
 Play/Pause DVD	 Shift + Play
 Dimmer DVD	 Shift + 3D
 Stop DVD	 Shift + Stop
 Pause DVD	 Pause
 << DVD	 Shift + <<
 >> DVD	 Shift + >>
 I<< DVD	 Shift + I<<
 >>I DVD	 Shift + >>I





Originale		Sostituto		Originale		Sostituto	
	Disc Sel		D. Menu				
	Disk Skip		Blue				
	Subtile		Subt				
	Audio		Dual				
	Angle		Format				
	Repeat		Text				

