 



 
 


 


 
 


 
 
 

 
 
 


 


 
 

 


 
 


 




 
 


 
 
 
 

 
 
 


 
 
 



 




 




Originale		Sostituto		Originale		Sostituto	
	Standby		Power		0		0
	Sleep		Sleep		+10		Guide
	Timer		Shift + AV		Clear		Exit
	Room EQ		Ch +		PTY		Options
	Random		Green		Time Display		List
	Repeat		Text		Display		Info
	P.Mode		Format		Mute		Mute
	Dimmer		Media		Flat		TV/R
	1		1		D-Bass		Smart
	2		2		Room EQ Mode		Ch -
	3		3		Tone Turn Over		Dual
	4		4		Mode		Menu
	5		5		Enter		Ok
	6		6		Phono		Back
	7		7		AUX		Red
	8		8		Sound Control UP		Up
	9		9		Sound Control		Down



Down



Originale		Sostituto		Originale	Sostituto
	Sound Preset		Right		
	Sound Preset Left		Left		
	Manual EQ		3D		
	Vol+		Vol +		
	Vol-		Vol -		
	Play/Pause CD		Play		
	Tuner/Band		Subt		
	Stop/Auto/Mono		Stop		
	Input Select		AV		
	I<< P.Call		I<<		
	P.Call >>I		>>I		
	<< Tuning		<<		
	Tuning >>		>>		

