



 

 
 









 

 
 






 



Originale		Sostituto		Originale		Sostituto	
	Power		Power		6		6
	P.Mode		Format		7		7
	Sleep		Sleep		8		8
	Dimmer		Shift + Mute		9		9
	Random		List		0		0
	Repeat		Text		+10		Guide
	A-B		Shift + Text		+100		Pre Ch
	Time Disp.		3D		Listen Mode		Media
	Display		Info		Mode		Smart
	Timer		Shift + AV		Volume+		Vol +
	PTY		Ch -		Volume-		Vol -
	Clear		Exit		Top Menu		D. Menu
	1		1		Menu		Menu
	2		2		Up		Up
	3		3		Left		Left
	4		4		Enter		Ok
	5		5		Right		Right





Originale	Sostituto
 Down	 Down
 Return	 Back
 Set	 Ch +
 Band/Tuner	 TV/R
 Play/Pause	 Play
 Play/Pause	 Pause
 Stop	 Stop
 I<<	 I<<
 >>I	 >>I
 <<	 <<
 >>	 >>
 Input Selector	 AV
 SP Setup	 Options
 DVD Setup	 Shift + Options
 D.Audio Rec	 Rec
 Flat	 Red
 D.Bass	 Green

Originale	Sostituto
 Tone Turn Over	 Yellow
 Manual EQ	 Blue
 Sound Preset	 Dual
 Auto Room EQ	 Shift + Green
 Room EQ Mode	 Shift + Yellow
 Channel Sel	 Shift + Blue
 On Screen	 Eject
 Audio	 Shift + Dual
 Subtitle	 Subt
 Mute	 Mute
 A1	 Shift + 1
 A2	 Shift + 2
 A3	 Shift + 3
 A4	 Shift + 4

