





Originale	Sostituto
 Mute	 Mute / Dimmer
 Power	 Power
 Input DVD CD	 Shift + 2
 Input Radio /	 Shift + 6
 Input VCR	 Shift + 4
 Input SAT	 Shift + 0
 Input AV AUX	 Shift + 7
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 Listen Mode	 TV/Radio /
 7	 7
 8	 8
 9	 9

Originale	Sostituto
 Sound	 Sound / Title
 10+	 Guide / EPG / -/-
 Clear	 Shift + Exit / Cancel / Clear
 0	 0
 100+	 Fav / Marker / PC
 Input Mode	 AV / Input / RDS
 Front	 Shift + Right
 Center	 Shift + OK
 Rear	 Shift + Left
 Sub-Woofer	 Eject / Surround
 Repeat	 Green / APP / Repeat
 Trim+	 CH+ / Page+
 Volume+	 Vol+
 Repeat A-B	 Yellow / YouTube / Repeat
 Trim-	 CH- / Page-
 Volume-	 Vol-
 Top Menu	 D.Menu / Top





Originale	Sostituto
	Up
	Menu / Home
	Text / Goto
	Left
	OK
	Right
	Exit / Cancel / Clear
	Down
	Display / Media
	Subtitle / EQ
	Audio / Lang I/II
	Stop / Hold
	Pause / Step / Freeze
	Play / Slow
	<< / Tune-
	Shift + << /
	>> / Tune+

Originale	Sostituto
	Shift + >> /
	I<< / Preset-
	Shift + I<< / Preset-
	>>I / Preset+
	Shift + >>I / Preset+
	Shift + Play /
	Shift + Pause / Step /
	Zoom / Size
	Picture / Format

