 



 





 



 


 








 
 
 



 



 



 
 

 



 




 



 



 

 











 

 

 
 



 

 
 

 



 







Originale		Sostituto		Originale		Sostituto	
	1		1		Top Menu		D.Menu / Top
	Disc 1	 + 	Shift + 1		Disc Skip	 + 	Shift + Display / Media
	2		2		0		0
	Disc 2	 + 	Shift + 2		Clear		Exit / Cancel / Clear
	3		3		Audio		Audio / Lang I/II
	Disc 3	 + 	Shift + 3		Subtitle		Subtitle / EQ
	Menu		Menu / Home		On/off		Power
	4		4		Angle		Info / Angle
	Disc 4	 + 	Shift + 4		Up		Up
	5		5		Left		Left
	Disc 5	 + 	Shift + 5		Right		Right
	6		6		Down		Down
	Seq.Mode		Fav / Marker / PC		P.Mode		Picture / Format
	On Screen		Display / Media		Random		Blue / Prime Video / Random
	7		7		Return		Back / Return
	8		8		Enter		OK
	9		9		<I Slow		Vol-





Originale		Sostituto		Originale	Sostituto
	Slow I>		Vol+		
	<II Step		CH- / Page-		
	Step II>		Shift + Pause / Step /		
	<<		<< / Tune-		
	>>		>> / Tune+		
	I<<		I<< / Preset-		
	>>I		>>I / Preset+		
	Repeat		Green / APP / Repeat		
	A-B		Yellow / YouTube / Repeat		
	Stop		Stop / Hold		
	Play		Play / Slow		
	Pause		Pause / Step / Freeze		
	Dimmer		Mute / Dimmer		

