











Originale	Sostituto
 Repeat	 Green / APP / Repeat
 A-B	 Yellow / YouTube / Repeat
 Random	 Blue / Prime Video / Random
 Power	 Power
 1	 1
 2	 2
 3	 3
 DVD/CD	 +  Shift + 2
 4	 4
 5	 5
 6	 6
 Tuner/Band	 +  Shift + 6
 7	 7
 8	 8
 9	 9
 VCR	 +  Shift + 4
 PGM	 Guide / EPG / -/--

Originale	Sostituto
 0	 0
 Clear	 Exit / Cancel / Clear
 Cable/Sat	 +  Shift + 0
 Angle	 Info / Angle
 RDS Disp.	 Display / Media
 PTY	 Sound / Title
 Book Mark	 Fav / Marker / PC
 Top Menu/Intro	 D.Menu / Top
 Up	 Up
 Menu/P.B.C.	 Menu / Home
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 On Screen	 Picture / Format
 I<< / P.Call	 I<< / Preset-





Originale	Sostituto
 P.Call >>	 >> / Preset+
 << Tuning	 << / Tune-
 Tuning >>	 >> / Tune+
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop/Auto/Mono	 Stop / Hold
 Subtitle	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 Slow	 Shift + Play /
 Step	 Shift + Pause / Step /
 Front	 Zoom / Size
 Center	 Sleep / Timer
 Rear	 TV/Radio /
 Trim Up	 CH+ / Page+
 Listen Mode	 Smart / List
 Active EQ./Set up	 Setup / OPT /
 SW	 Red / Netflix / Search

Originale	Sostituto
 Trim Down	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Volume+	 Vol+

