













 

 
























 

 





 

 





 

 





 

 





 

 

Originale	Sostituto	Originale	Sostituto
 Open / Close	 Eject / Surround	 8	 8
 Power	 Power	 9	 9
 V.Mode	 Picture / Format	 OSD	 Display / Media
 Title	 Sound / Title	 N/P	 Red / Netflix / Search
 Subtitle	 Subtitle / EQ	 0	 0
 Menu	 Menu / Home	 Setup	 Setup / OPT /
 Repeat	 Green / APP / Repeat	 Up	 Up
 A-B RPT	 Yellow / YouTube / Repeat	 Intro	 OK
 Angle	 Info / Angle	 Left	 Left
 Audio	 Audio / Lang I/II	 Play	 Play / Slow
 1	 1	 Right	 Right
 2	 2	 Zoom	 Zoom / Size
 3	 3	 Down	 Down
 4	 4	 Prog	 TV/Radio /
 5	 5	 CH+	 CH+ / Page+
 6	 6	 Rec	 Rec / Rec Mode
 7	 7	 CH-	 CH- / Page-

Originale	Sostituto	Originale	Sostituto
 8	 8	 8	 8
 9	 9	 9	 9
 OSD	 Display / Media	 OSD	 Display / Media
 N/P	 Red / Netflix / Search	 N/P	 Red / Netflix / Search
 0	 0	 0	 0
 Setup	 Setup / OPT /	 Setup	 Setup / OPT /
 Up	 Up	 Up	 Up
 Intro	 OK	 Intro	 OK
 Left	 Left	 Left	 Left
 Play	 Play / Slow	 Play	 Play / Slow
 Right	 Right	 Right	 Right
 Zoom	 Zoom / Size	 Zoom	 Zoom / Size
 Down	 Down	 Down	 Down
 Prog	 TV/Radio /	 Prog	 TV/Radio /
 CH+	 CH+ / Page+	 CH+	 CH+ / Page+
 Rec	 Rec / Rec Mode	 Rec	 Rec / Rec Mode
 CH-	 CH- / Page-	 CH-	 CH- / Page-





Originale	Sostituto
 Timer	 Sleep / Timer
 Quality	 Blue / Prime Video / Random
 Disc	 D.Menu / Top
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Pause / Step	 Pause / Step / Freeze
 Stop	 Stop / Hold
 <I Slow	 Shift + Left
 Slow I>	 Shift + Right
 DVD	 Shift + 2
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Volume+	 Vol+
 Source	 AV / Input / RDS
 Book Mark	 Fav / Marker / PC

Originale	Sostituto
 Edit	 Text / Goto
 Chap Mark	 Smart / List

