



Originale	Sostituto
Power	Power
I<<	I<< / Preset-
Eject	Eject / Surround
<<	<< / Tune-
>>	>> / Tune+
>>	>>  / Preset+
Play/Pause	Play / Slow
TV/TXT /	Text / Goto
TV/TXT /	Audio / Lang I/II
Cancel / Zoom	Shift + Exit / Cancel / Clear
Cancel / Zoom	Shift + Zoom /
Reveal / Subtitle	Shift + Subtitle / EQ
Stop	Stop / Hold
Hold / Menu	D.Menu / Top
Hold / Menu	Shift + Stop /
Size / Angle	Shift + Info / Angle
Subpage / Title	Shift + Sound / Title

Originale	Sostituto
Index / Goto	Shift + Text /
Red/Program	Red / Netflix / Search
Red/Program	TV/Radio /
Green/Slow	Green / APP / Repeat
Green/Slow	Shift + Play /
Yellow/Repeat	Yellow / YouTube / Repeat
Yellow/Repeat	Shift + Green / APP /
Blue/A-B	Blue / Prime Video / Random
Blue/A-B	Shift + Yellow / YouTube /
CH+	CH+ / Page+
TV Menu	Menu / Home
Vol+	Vol+
CH-	CH- / Page-
Source	AV / Input / RDS
Vol-	Vol-
DTV	Shift + 1
DVD Setup	Setup / OPT /





Originale		Sostituto		Originale		Sostituto	
	Up		Up		0		0
	Left		Left		Recall		Back / Return
	OK		OK		Picture		Picture / Format
	Right		Right		Sound		Sound / Title
	Down		Down		I/II		Shift + Audio / Lang I/II
	Exit		Exit / Cancel / Clear		Mute		Mute / Dimmer
	Display		Display / Media		Sleep		Sleep / Timer
	1		1		Info		Info / Angle
	2		2		Zoom		Zoom / Size
	3		3		Freeze		Pause / Step / Freeze
	4		4		EPG		Guide / EPG / -/--
	5		5		FAV List		Smart / List
	6		6		FAV ADD		Fav / Marker / PC
	7		7		FAV >>I		Shift + Right
	8		8		Subtitle		Subtitle / EQ
	9		9		Time		Shift + Sleep / Timer
	-/--		Shift + Guide / EPG / -/--		Quick Start		Shift + Smart / List

