 





 

 

 
 
 



 


 

 









 









Originale	Sostituto
 Power	 Power
 Mute	 Mute
 Source	 AV
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 Audio/I/II	 Dual
 Sleep	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Originale	Sostituto
 Radio/+10	 Guide
 Recall/Program	 Back
 Tv Menu	 Menu
 Exit	 Exit
 Goto/Text	 Text
 Display	 Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK/Enter	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 P+	 Ch +
 P-	 Ch -
 Red/DVD Setup	 Red
 Green/A-B	 Green





Originale	Sostituto
ANGLE Yellow/Angle	C Yellow
REPEAT Blue/Repeat	D Blue
SUBTITLE Subtitle	AD SUBT Subt
HOLD Play	PLAY MODE Play
HOLD Pause/Hold	Pause
SIZE Title/Size	PICTURE FORMAT Format
REVEAL D.Dis/Reveal	SETTINGS OPT Options
MIX D.Menu/MIX	E-MANUAL D.MENU D. Menu
INDEX Zoom/Index	SHIFT + ZOOM Shift + Eject
FAV I<</FAV	I<<
SUBPAGE >>I/Subpage	>>I
LANGUAGE Stop/Language	Stop
FAV- <</FAV-	<<
FAV+ >>/FAV+	>>
EPG Eject/EPG	ZOOM Eject
MEDIA Media	APP MEDIA Media
REC Rec	REC MODE Rec

Originale	Sostituto
[*]	ECO 3D 3D
T-SHIFT	SEARCH TVR TV/R

