












Originale	Sostituto
	Power
	Source
	1
	2
	3
	4
	5
	6
	7
	8
	9
	List
	0
	Info
	Vol+
	Mute
	P+


Originale	Sostituto
	Power
	AV / Input / RDS
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Smart / List
	0
	Info / Angle
	Vol+
	Mute / Dimmer
	CH+ / Page+

Originale	Sostituto
	Vol-
	Home
	P-
	Back
	Exit
	Up
	Left
	OK
	Wheel Up
	Right
	Wheel Down
	Down
	Guide
	3D
	*/Settings
	Red
	Green

Originale	Sostituto
	Vol-
	Menu / Home
	CH- / Page-
	Back / Return
	Exit / Cancel / Clear
	Up
	Left
	OK
	>>I / Preset+
	Right
	I<< / Preset-
	Down
	Guide / EPG / -/-
	Shift + 3
	D.Menu / Top
	Red / Netflix / Search
	Green / APP / Repeat





Originale		Sostituto		Originale		Sostituto	
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	Text		Text / Goto				
	T.Opt		Setup / OPT /				
	Subt.		Subtitle / EQ				

