







 












 


 





 

 








Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Vol+	 Vol+
 TV/RAD	 TV/Radio /	 Mute	 Mute / Dimmer
 Input	 AV / Input / RDS	 PR+/Page Up	 CH+ / Page+
 AV Mode	 Picture / Format	 Vol-	 Vol-
 Energy Saving	 Eject / Surround	 PR-/Page Down	 CH- / Page-
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 OK	 OK
 4	 4	 Right	 Right
 5	 5	 Menu	 Menu / Home
 6	 6	 Down	 Down
 7	 7	 Return	 Back / Return
 8	 8	 Red	 Red / Netflix / Search
 9	 9	 Green/Stop	 Green / APP / Repeat
 List	 Smart / List	 Green/Stop	 Stop / Hold
 0	 0	 Yellow/Play	 Yellow / YouTube / Repeat
 Q.View	 Display / Media	 Yellow/Play	 Play / Slow

Originale	Sostituto	Originale	Sostituto
 DIMMER MUTE	 SHIFT	 TV	 DVD
 SLOW	 STEP-FREEZE	 SAT	 AUX
 HOLD	 REC MODE	 TUNE-	 TUNE+
 PRESET-	 PRESET+	 TITLE	 LANG UII
 EQ	 SURROUND	 SOUND	 AUDIO
 SUBTITLE	 PROGRAM	 FORMAT	 SIZE
 TIMER	 TV RADIO	 PICTURE	 ZOOM
 SLEEP	 RDS	 TOP MENU	 OPT-TOOLS
 GOTO	 AV INPUT	 D.MENU	 SETUP
 TEXT	 HOME	 MENU	 ANGLE
 INFO	 OK	 CLEAR	 EXIT
 RETURN	 BACK	 CANCEL	 LIST
 SMART	 MEDIA	 VOL+	 SMART
 CH PAGE	 DISPLAY	 VOL-	 MEDIA
 TV	 DVD	TV	DVD
CD - STB	TUNER	1	2
VIDEO	TAPE	3	4
AUX - HDD	USB	4	5
BLUETOOTH	9	5	6
RETURN	BACK	6	7
Red	NETFLIX	7	8
Green/Stop	SEARCH	8	9
Green/Stop	APP	9	0
Stop / Hold	REPEAT	0	FAV MARKER
Stop / Hold	HOLD	GUIDE EPG	HDMI - BAT
Yellow / YouTube / Repeat	YouTube	SEARCH	REPEAT
Yellow/Play	REPEAT A-B	REPEAT A-B	RANDOM
Yellow/Play	SLOW	SLOW	RANDOM





Originale	Sostituto
 Blue/Pause	 Blue / Prime Video / Random
 Blue/Pause	 Pause / Step / Freeze
 Text/[≡]	 Text / Goto
 T.OPT/<<<	 I<< / Preset-
 T.OPT/<<<	 Setup / OPT /
 T.OPT/<<<	 <<< / Tune-
 Subtitle/>>>	 >>> / Preset+
 Subtitle/>>>	 Subtitle / EQ
 Subtitle/>>>	 >>> / Tune+
 Simplink	 Sleep / Timer
 Q.Menu	 D.Menu / Top
 Info	 Info / Angle
 Guide	 Guide / EPG / -/--
 FAV/Mark	 Fav / Marker / PC

Originale	Sostituto

