


 

 

 




 
 
 
 
 
 
 

 





Originale	Sostituto
 Power	 Power
 Tv/Radio	 TV/R
 Subtitle	 Subt
 Q Menu	 Menu
 Guide	 Guide
 [ ]/Ratio	 Dual
 Input	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Originale	Sostituto
 List	 List
 Q.View	 Format
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 APP/*	 Shift + Media
 Fav	 Pre Ch
 PR+	 Ch +
 PR-	 Ch -
 Text	 Text
 Info	 Info
 T.Opt	 Options
 Smart	 Smart
 My Apps	 Media
 Back	 Back
 Exit	 Exit
 Up	 Up





Originale	Sostituto
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Settings	 Shift + Options
 Rec	 Rec
 Stop/Line Tv	 Stop
 <<	 <<
 Play	 Play
 Pause	 Pause
 >>	 >>
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue

Originale	Sostituto

