

 
 
 



 
 

 
 



 


 


 

 
 



 



 




Originale	Sostituto
 Power	 Power
 Open/Close	 Eject
 Tv/DVD	 TV/R
 PIP	 3D
 *	 Guide
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 AV	 AV
 [...] / Subtitle	 Subt

Originale	Sostituto
 O)) / Audio	 Dual
 Rec	 Rec
 Camera / Angle	 Options
 Play	 Play
 Stop	 Stop
 Pause / Step	 Pause
 << Scan	 <<
 Scan >>	 >>
 I<< Skip	 I<<
 Skip >>I	 >>I
 Menu / List	 Menu
 Up / PR+	 Up
 Setup	 D. Menu
 Down / PR-	 Down
 Right	 Right
 Left	 Left
 OK	 Ok





Originale	Sostituto
DISPLAY	INFO
RETURN	BACK
CLEAR	EXIT
ZOOM	SHIFT + ZOOM
INSTANT SKIP	APP MEDIA
TITLE	SHIFT + GUIDE
REPEAT	REPEAT TEXT
PROGRAM	PROG SLEEP
RANDOM	B
A - B	SHIFT + PLAY MODE
3D Surr.	SHIFT + ECO 3D
SEARCH	SHIFT + SEARCH TV/R
MARKER	SHIFT + AD SUBT
THUMBNAIL	PICTURE FORMAT
CHP ADD	FAV PRE-CH
POWER	SHIFT + POWER
AV	SHIFT + AV

Originale	Sostituto
PR	+ CH
	CH -
VOL	+ VOL
	VOL -
MUTE	MUTE
REC MODE	SHIFT + REC MODE
TIMER REC	D

