 


 
 
 

 

 


 
 


 


 
 

 

 



 
 

 
 
 

 
 




 
 
 
 


 
 



 










 


 




Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Up	 Up
 Guide	 Guide	 Down	 Down
 [ ]/Ratio	 Subt	 Right	 Right
 Info	 Info	 Left	 Left
 Input	 AV	 OK	 Ok
 1	 1	 Settings/List	 Menu
 2	 2	 Back	 Back
 3	 3	 Exit	 Exit
 4	 4	 Q.Menu	 D. Menu
 5	 5	 FAV	 Pre Ch
 6	 6	 Mute	 Mute
 7	 7	 Simplink	 Media
 8	 8	 Q.View	 Options
 9	 9	 Energy/Saving	 3D
 0	 0	 AV Mode	 Format
 --	 List	 Vol+	 Vol +
 TV	 TV/R	 Vol-	 Vol -

Originale	Sostituto	Originale	Sostituto
 MUTE	 MUTE	 TV	 TV
 DVD	 DVD	 DUAL	 DUAL
 SAT	 SAT	 SOUND	 SOUND
 AUX	 AUX	 AD	 AD
 PLAY MODE	 PLAY MODE	 SETTINGS	 SETTINGS
 II	 II	 OPT	 OPT
 ■	 ■	 ECO	 ECO
 <<<	 <<<	 3D	 3D
 >>>	 >>>	 TIMER	 TIMER
 DISC NAV	 DISC NAV	 AV	 AV
 LIST	 LIST	 E-MANUAL	 E-MANUAL
 SOUND	 SOUND	 D.MENU	 D.MENU
 SEARCH	 SEARCH	 TOP MENU	 TOP MENU
 PICTURE	 PICTURE	 MENU	 MENU
 Q.VIEW	 Q.VIEW	 INFO	 INFO
 ENERGY SAVING	 ENERGY SAVING	 OK	 OK
 AV MODE	 AV MODE	 RETURN	 RETURN
 VOL+	 VOL+	 CLEAR	 CLEAR
 VOL-	 VOL-	EXIT	EXIT
		BACK	BACK
		HOME	HOME
		SMART	SMART
		APP	APP
		MEDIA	MEDIA
		CH+	CH+
		CH-	CH-
		1	1
		2	2
		3	3
		4	4
		5	5
		6	6
		7	7
		8	8
		9	9
		0	0
		FAV	FAV
		PRE-CH	PRE-CH
		A	A
		B	B
		C	C
		D	D
		Mandis SHOP	Mandis SHOP
		www.mandis.tv	www.mandis.tv



