




 







Originale	Sostituto
Power	Power
Tv/Rad	TV/Radio /
Source	AV / Input / RDS
*	D.Menu / Top
Live Zoom	Zoom / Size
Subtitle	Subtitle / EQ
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
List	Smart / List
0	0

Originale	Sostituto
Guide	Guide / EPG / -/--
Vol+	Vol+
Info/Quick Access	Info / Angle
P+	CH+ / Page+
Vol-	Vol-
Search	Picture / Format
P-	CH- / Page-
Mute	Mute / Dimmer
Netflix	Shift + Red / Netflix /
Home	Menu / Home
Amazon	Shift + Blue / Prime
Back	Back / Return
Up	Up
Exit	Exit / Cancel / Clear
Left	Left
OK	OK
Right	Right





Originale	Sostituto
 Text	 Text / Goto
 Down	 Down
 T.Opt	 Setup / OPT /
 AD/*	 Audio / Lang I/II
 Rec/*	 Rec / Rec Mode
 Stop	 Stop / Hold
 <<	 << / Tune-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

Originale	Sostituto

